

 
110 100 90 80 70 60 50 40 30 20 10  
55 50 45 40 35 30 25 20 15 10 5  
mm  
10 20 30 40 50 60 70 80 90 100 110

200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0 mm 10 20 30


200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0 mm 10 20 30

390 mm  
380 mm  
370 mm  
360 mm  
350 mm  
340 mm  
330 mm  
320 mm  
310 mm  
300 mm  
290 mm  
280 mm  
270 mm  
260 mm  
250 mm  
240 mm


↑  
EQUAL DISTANCE TO  
SKI EDGE TO FIND CENTER  
↓  
(overall width)



← Ski Tip  
 USE ONLY AT  
 YOUR OWN RISK

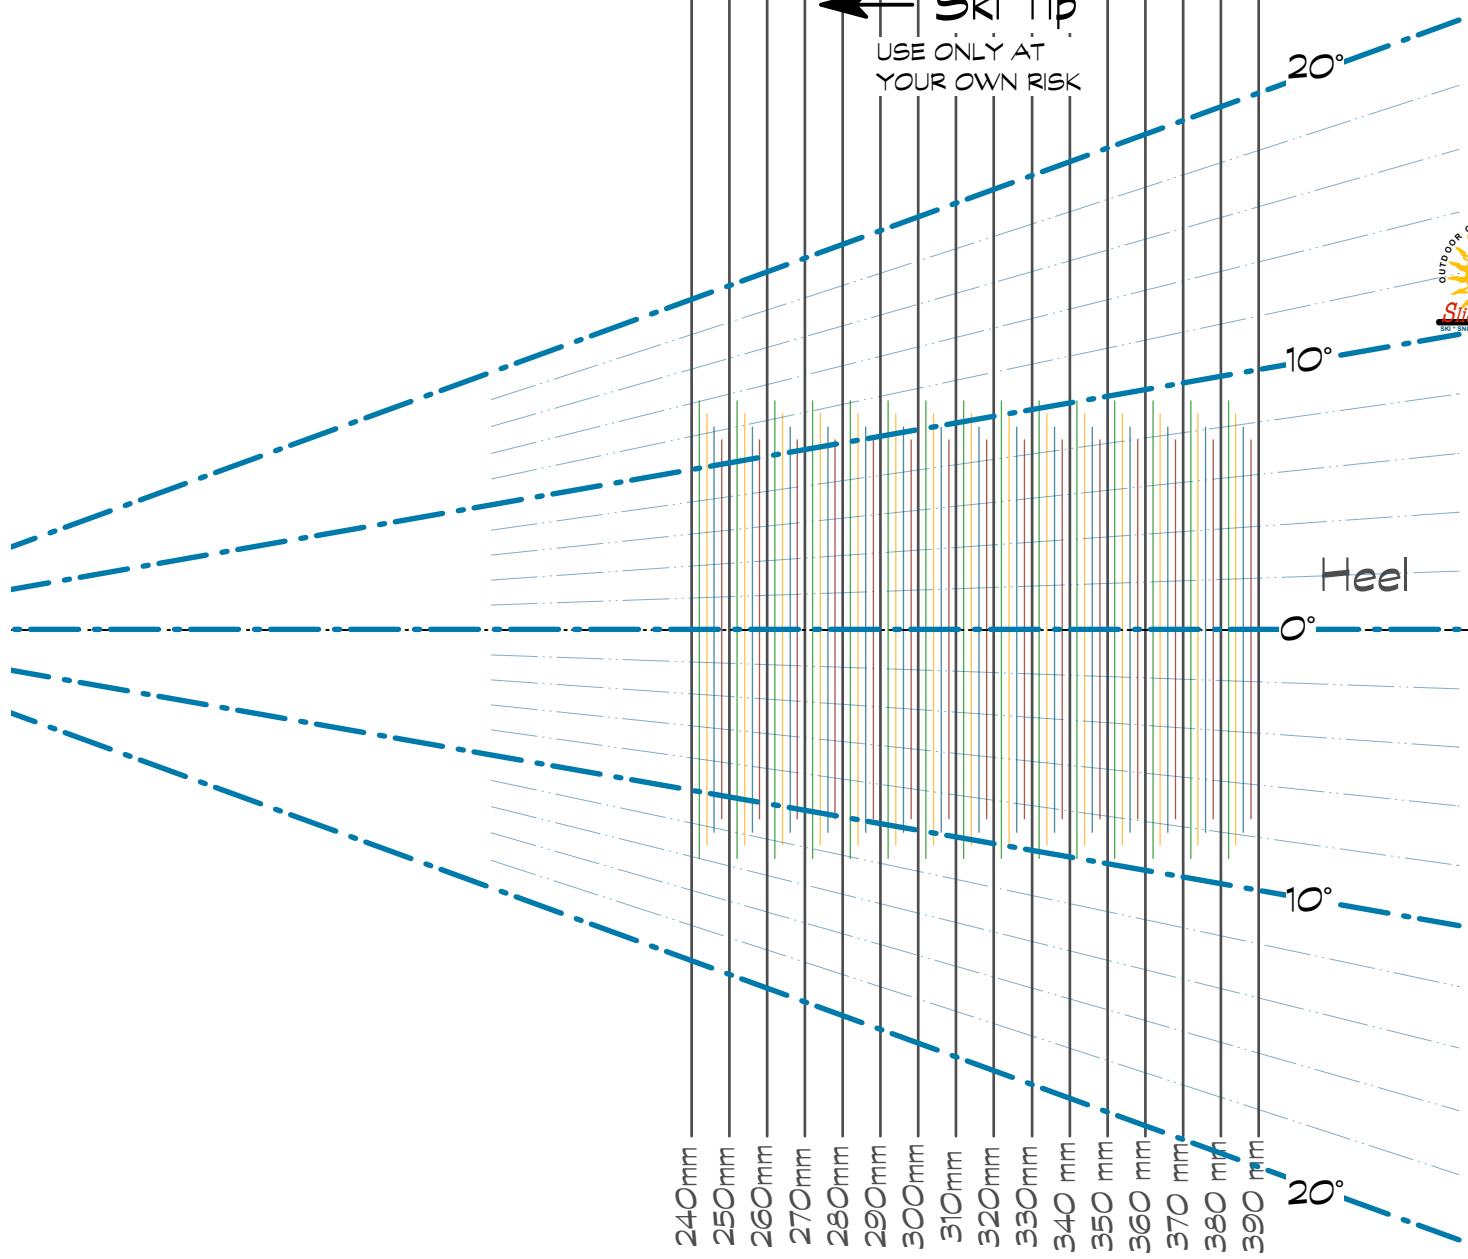

↑ EQUAL DISTANCE TO  
 SKI EDGE TO FIND CENTER

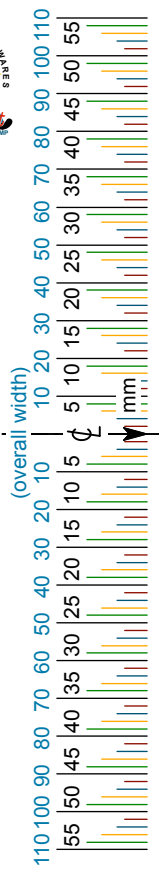

240mm  
 250mm  
 260mm  
 270mm  
 280mm  
 290mm  
 300mm  
 310mm  
 320mm  
 330mm  
 340mm  
 350mm  
 360mm  
 370mm  
 380mm  
 390mm

20°

10°

0°

Heel

10°

20°